Cordless Kettle

Model: ENVOYE



Original instructions

Last update : 07/07/2022



3 RUE DES BRECHES – 44400 REZE - FRANCE Tél. +33 (0)2 40 75 98 20 www.jvd.fr

READ THESE INSTRUCTIONS CAREFULLY BEFORE THE INSTALLATION

IMPORTANT SAFETY PRECAUTIONS

- The installer must comply with the installation standards in the country at the time of installation.
- Before use, ensure the rated voltage indicated on the appliance match the supply voltage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- Do not keep the power cord pulled or depressed with any heavy load.
- Do not connect any other appliances on the same line. It may result in overheating and fire
- Never immerse the power cord, plug and application into water or any other liquid to avoid danger caused by electrical.
- CAUTION: avoid overflow on the connector
- Do not use the kettle for any purpose other than heating water.
- Do not overfill the appliance as boiling water may eject out and damage person or inflow into the inside of the power base to cause short circuit.
- Never carry the kettle by holding the lid instead of the handle.

- Do not operate or place the appliance on or near any hot surface (such as gas or electrical or electrical burner or in a heated oven).
- Use the kettle only with the provided base unit.
- Never disassemble your kettle and replace internal components to protect from any dangers.
- To protect against fire, do not operate in presence of explosive and / or flammable fumes.
- When in use, place the kettle on a flat and stable surface.
- Never cover the spout or spout with something when boiling.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of the reach of children under 8 years old.
- Children shall not play with the appliance.



- Caution, hot surface. Surfaces may become hot during use.
- The outer surface of the kettle's stainless steel tank has residual heat after use
- To avoid possible steam damage, turn the spout of the kettle backward to person when operating the appliance.
- When boiling, do not open the top lid to avoid personal damages caused by hot steam.
- Do not touch the spout or steam outlet of the kettle.
- Incorrect use of the kettle, or use in contradiction with this manual, presents the danger of wound, burns or electrocution.
- Before cleaning, let the kettle cool down completely.
- For cleaning details, refer to paragraph p6

TECHNICAL SPECIFICATIONS

Supply voltage: 220-240V 50-60Hz

Power: 800 W

Electrical insulation: Classe I

Capacity: 0,6L

Automatic shut-off at boiling Double wall to prevent burns

Interior all INOX

PRODUCT CONSTRUCTION

- 1 Hinged lid
- 2 Lid release button
- 3 On/off switch
- 4 Handle
- 5 Pilot light
- 6 Base unit



HOW TO USE

This device is intended for use in domestic and similar applications such as:

- Kitchen corners reserved for staff in shops, offices and other professional environments;
- The use by customers of hotels, motels and other residential environments;
- Bed and Breakfast type environments;
- Farms.
- 1. Place the kettle together with its Base unit on a dry and flat surface.
- 2. In case the length of exposed power cord is not enough to plug in, extend the power cord retracted-in Base Unit (Max exposed cord length . 0.75).
- 3. Before first use, fill the kettle with clean water to MAX line and boil. Discard and repeat for formal use.

- 4. Filling Depress the Lid Release Button inward and open the lid up. Fill the kettle with tap water directly no over the MAX line. You are allowed to fill the kettle via the spout.
- 5. Put the kettle containing clean water onto the Base Unit vertically.
- 6. Plug the appliance in the mains socket.
- 7. Press ON /OFF Switch to «1 » position (ON), the pilot light comes on indicating that the appliance starts working.
- 8. When water has boiled, the kettle will switch off automatically. The pilot light goes off. After allowing the kettle cool down for 1 minute, the water can be brought back for re-boiling via push the Switch back to « 1 » position.
- 9. Hold the body handle by pressing on « 0 » position (OFF) and slope down slowly to water into the cup.
- 10. During boiling, you are allowed to stop heating momentarily by depressing ON/OFF Switch to « 0 » position (OFF).

CARING FOR YOUR JUG KETTLE

After using for a period of time, the water scale may built up on the inside surface of the kettle and influence the performance and appearance. Descale your kettle twice a year as indicated below:

- 1. Fill the kettle mixed with acetic acid and water at a proportion of 1:2.
- 2. Plug the appliance, press the ON/OFF Switch to « ON » position indicating the appliance starts to heat up.
- When liquid is boiled, unplug the kettle. Allow the mixture cool down; remove the scale with soft cloth or brush.
- 4. Throw away this boiled water, rinse inside of the kettle with clean water and wipe the kettle dry with soft cloth.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Faulty connection or any damage resulting from wrongly usage or which is in contradiction to the instructions in this leaflet will render the guarantee void.

This equipment complies with the regulations in European directives 2014/30/UE, 2014/35/UE, and 2011/65/EC.

IMPORTE PAR JVD



3 RUE DES BRECHES – 44400 REZE - FRANCE Tél. +33 (0)2 40 75 98 20 www.jvd.fr